


Description	Material	Finish
Body	Brass	Nickel
Socket	BE CU	Gold
Insulation	PTFE	N/A
Washer	PH Bronze	Nickel
Gasket	SI Rubber	Rubber
Crimp Ring	Brass	Nickel
Insulator	PTFE	N/A
Cover	Brass	Nickel
Heat Shrink	Polyolefin	Black

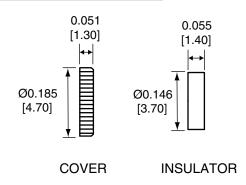



CONREVSMA012-R178 ASSEMBLY INSTRUCTIONS

- 1. Strip the cable to the recommended dimensions.
- 2. Slip heat shrink and crimp ring onto stripped cable.
- 2. Slide the cable into the body until the center conductor is centered in the fork.
- 3. Push the braided shield over the barrel.
- 4. Solder the center conductor into the center of the fork.
- Slide the crimp ring over the shield and crimp with a 0.100" hex crimp tool.
- 6. Trim off any excess shield wire sticking out from the ring.
- Slip the heat shrink over the crimp ring until it is against the body and shrink.
- 8. Insert insulator into body.
- 9. Push the cover into the opening.

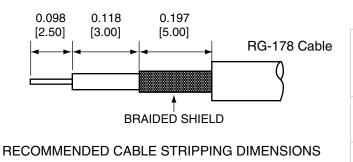




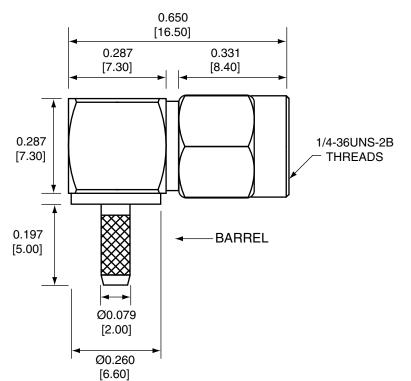

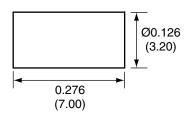

CRIMP RING

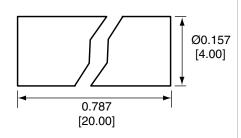

HEAT SHRINK

NOTES: (UNLESS OTHERWISE SPECIFIED)

TITLE:

DT: 2-JUL-12

- 1. ALL DIMENSIONS ARE IN INCHES [mm].
- 2. DIMENSIONS APPLY AFTER FINISHING.
- 3. MANUFACTURE TO BE COMPLIANT WITH EU ROHS DIRECTIVE.
- 4. SAFETY BREAK ALL SHARP CORNERS AND EDGES .02 MAXIMUM.

WARNING: THIS DRAWING CONTAINS PROPRIETARY INFORMATION THAT IS THE SOLE PROPERTY OF LINX TECHNOLOGIES, AND SHALL BE TREATED AS SUCH. NO DISCLOSURE OR REPRODUCTION OF THIS DOCUMENT IS PERMITTED, IN WHOLE OR IN PART, WITHOUT THE EXPRESS WRITTEN PERMISSION OF LINX TECHNOLOGIES OR ITS

SIDE VIEW

DESIGNATED AGENTS.

MATERIAL:

TOLERANCES:
.020 [0.50]-200 [5.00]=±.008 [0.20]
.200 [5.00]-1.200 [30.00]=±.016 [0.40]
1.20 [30.0]-4.75 [120.0]=±.024 [0.60]
4.75 [120.0]-12.40 [315.0]=±.040 [1.0]

ANGLES: ±1°

ANGLES: ±1°

PRAWN: B.MURPHY DT: 2-JUL-12

ENGR: S.HOGAN

RP-SMA MALE RIGHT ANGLE CABLE END CRIMP FOR RG178 CABLE

159 ORT LANE

MERLIN, OR 97532

SIZE DWG. NO.

CONREVSMA012-R178 B

SCALE: 2:1 DO NOT SCALE DRAWING SHEET 1 OF 1